

# TABLE OF CONTENTS

|                     |          |
|---------------------|----------|
| <b>YOUR PHONE</b>   | <b>3</b> |
| Front View Features | 3        |
| Bottom View         | 4        |
| Side by Side View   | 5        |
| Cool Apps           | 6        |
| SIM Card            | 7        |
| Memory Card         | 11       |
| Battery             | 13       |
| Power               | 15       |
| Making a Call       | 16       |
| Sending a Message   | 16       |
| Home Screen         | 18       |
| Ringtone            | 24       |
| Volume              | 25       |
| Voicemail           | 26       |
| Contacts            | 27       |
| Email               | 28       |
| Bluetooth           | 32       |

|                             |    |
|-----------------------------|----|
| Camera & Camcorder          | 33 |
| Near Field Communication    | 35 |
| Battery & Memory Management | 38 |

|              |           |
|--------------|-----------|
| <b>NOTES</b> | <b>42</b> |
|--------------|-----------|

# YOUR PHONE

## FRONT VIEW FEATURES



1. MENU KEY
2. HOME/RECENT APPS KEY
3. BACK KEY
4. FRONT FACING CAMERA
5. INFRARED BLASTER
6. EARPIECE
7. HEADSET JACK
8. FLASH
9. CAMERA




YOUR PHONE

## BOTTOM VIEW

1. CHARGING  
PORT
2. MICROPHONE



## SIDE BY SIDE VIEW

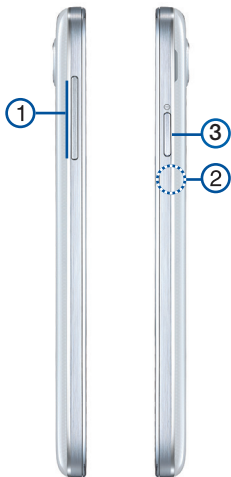

1. VOLUME KEY
2. MEMORY CARD SLOT\*
3. POWER KEY

\*The Memory Card Slot is located under the battery cover.

## COOL APPS

### Samsung Link

Share your on-device media content with other external devices, such as an HDTV, using DLNA® (Digital Living Network Alliance) technology.

### S Voice

Provides a built-in voice recognition system that allows you to initiate several common tasks by using natural speech.

### ChatOn

Use the same profile, buddy list, and chat list on all devices connected to your Samsung account.

### Samsung Hub


Integrated store for media content that offers a comprehensive and consistent media service experience for users. Users can browse and purchase all media content within a single store front.

## SIM CARD


This device uses a micro SIM. The new micro SIM (Subscriber Identity Module) card identifies your phone to the wireless network. You cannot make or receive calls or browse the Internet without a properly installed micro SIM card. Other larger SIM cards will not function or fit within this slot.

### Insert the SIM card

1. Detach the SIM card from its packaging.
2. Hold the device firmly and locate the cover release latch.

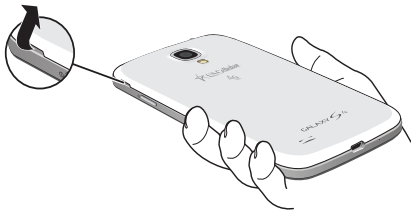

3. Place your fingernail in the opening and firmly “pop” the cover off the device.

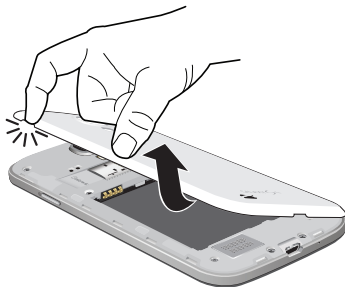

4. Carefully slide the micro SIM card into the SIM card socket until it clicks into place.





**NOTE:** This device requires a SIM card. Please insert the SIM card included in the package prior to turning on the device. This SIM card will only work with this device. Once the SIM card has been inserted, do not remove!

If your SIM card is ever separated from the device or damaged, your device will not function. If you experience any issues with your device, contact Customer Service at 888-944-9400 (or dialing 611 on Your U.S. Cellular® handset) or visit your nearest U.S. Cellular retail location.

### **SIM Card Limited Warranty**

Subject to the exclusions contained below, United States Cellular Corporation ("U.S. Cellular®") warrants to the original purchaser ("You" or "Your") of the handset with which the SIM card was provided that the SIM card will be free from defects in material and workmanship for a period of one (1) year from the date You purchased the handset (the "Warranty Period"). This warranty is not transferable. Should a defect appear during the Warranty Period, U.S. Cellular will send a replacement SIM card to Your address within the United States without charge provided that you request the replacement SIM card during or within thirty (30) days following the Warranty Period by calling U.S. Cellular Customer Service at 888-944-9400 (or dialing 611 on your U.S. Cellular handset) or by visiting a U.S. Cellular retail store.

REPLACEMENT OF THE SIM CARD AS PROVIDED HEREIN IS YOUR EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OF TITLE, FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, NON-INFRINGEMENT OR ARISING FROM COURSE OF DEALING OR USAGE OF TRADE. NEITHER U.S. CELLULAR NOR ANY OF ITS AFFILIATES OR RETAILERS SHALL BE LIABLE TO YOU FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, ECONOMIC, EXEMPLARY, PUNITIVE OR CONSEQUENTIAL DAMAGES (INCLUDING, WITHOUT LIMITATION, LOSS OF DATA, LOSS OF REVENUE OR PROFITS, DAMAGE TO PROPERTY OR LOSS OF USE). IN NO EVENT SHALL U.S. CELLULAR'S, ITS AFFILIATES' OR RETAILERS' LIABILITY TO YOU OR ANY THIRD PARTY WITH RESPECT TO THE SIM CARD EXCEED THE COST OF REPLACING THE SIM CARD.

THIS LIMITED WARRANTY SHALL BE CONSTRUED UNDER THE LAWS OF THE STATE OF ILLINOIS, EXCLUDING ITS CONFLICTS OF LAW PROVISIONS. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE DISCLAIMER OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND DISCLAIMERS MAY NOT APPLY TO YOU.

No agent, employee, dealer, retailer, representative or reseller is authorized to modify or extend the terms of this Limited Warranty.

## MEMORY CARD

Your phone **does not** come with a microSD memory card. However, you can purchase one separately and use it to store your multimedia files.

**NOTE:** microSD memory cards include capacities of up to 2GB. microSDHC™ memory card types can range from 4GB to up to 64GB.

**WARNING:** Applications, personal settings and other stored data may be lost or may not function properly if the memory card is removed.

## Install the memory card

1. Locate the microSD card slot on the inside of the phone.
2. Orient the card with the gold strips facing down.
3. Carefully slide the microSD card into the card socket until it clicks into place.



## BATTERY

Your phone is shipped with the battery partially charged. Please charge it fully before using it for the first time.

### Install the Battery

1. Slide the battery into the compartment (1) so that the tabs on the end align with the slots at the bottom of the phone, making sure the connectors align.
2. Gently press down to secure the battery (2).



## Charge the battery


1. Connect the USB cable to the charging head.
2. Insert the USB cable into the device's Charger/Accessory jack.





3. If using a wall charger, plug the charging head into a standard AC power outlet. If using a computer, remove the charging head and plug the USB cable into computer's USB port.

## POWER



### Turn the phone on

- ▶ Press and hold  (Power/Lock) until the phone switches on. It searches for your network and after finding it, you can make or receive calls.



### Turn the phone off

1. Press and hold  (Power/Lock) until the Device options screen appears.
2. Tap  (Power off) → OK.

### Restarting the phone



1. Press and hold  (Power/Lock) until the Device options screen appears.
2. Tap  (Restart) → OK.

## MAKING A CALL

1. From the Home screen, tap  (**Phone**).
2. Enter the number you wish to call (using the keypad) and tap  (**Send**) to place a call.

**NOTE:** If you make a mistake while dialing, touch  to clear the last digit. Touch and hold  to clear the entire sequence.

## SENDING A MESSAGE

1. From the Home screen, tap  (**Messaging**)  
→  (**Compose**).
2. Tap the **Enter recipient** field to manually enter a recipient.

– OR –

Tap  to select from one of the following:

**Contacts:** to select a recipient from your Contacts list (valid entries must have a wireless phone number or email address).

**Groups:** to select a recipient from the Group list.



**Favorites:** to select a recipient from the Favorites list.

**Recent:** to select a recipient from a list of recently sent messages.



3. If adding a recipient from either Recent, Contacts, or Group, tap the contact to place a checkmark then tap **Done**. The contact displays in the recipient field.

**NOTE:** Delete any unnecessary members by tapping their name/number in the recipient area and selecting Delete.

4. Add more recipients by tapping either the **Enter recipient** field or and selecting recipients.
5. Tap the **Enter message** field and use the on-screen keypad to enter a message.
6. To add an attachment to your message, tap  (**Attach**).
7. Review your message and tap  (**Send**).
8. If you have more than one recipient, the same text message is sent to all recipients in the Enter Recipients field.

**NOTE:** If you exit a message before you send it, then it will be automatically saved as a draft.

## HOME SCREEN

Swipe your fingers left or right to view the entire Home screen. You can customize the screen with widgets and shortcuts to your favorite applications.

### Status bar

The Status bar appears at the top of your Home screen. Icons indicating your phone's status and new notification alerts appear on the Status bar.



## Notification Screen

The Notification area indicates new message events (data sync status, new messages, calendar events, call status, etc). You can expand this area to reveal the Notifications screen that provides more detailed information about the current on-screen notification icons.


### To open the Notifications screen


1. In a single motion, touch and drag the **Status bar** down to the bottom of the screen to open the Notifications screen (1).
2. Tap a notification entry to open the associated application (2).



## To access additional notification options

In addition to notifications, this screen also provides quick and ready access to separate phone functions. These can be quickly activated or deactivated by toggling them on or off.

1. In a single motion, touch and drag the **Status bar** down to the bottom of the screen.
2. Tap the  in top right corner to access additional functions.

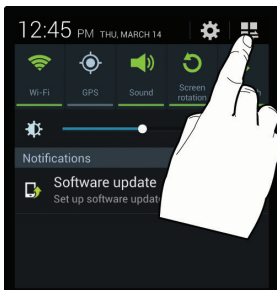


## Multi-window

This feature allows you to run multiple applications on the current screen at the same time.

**NOTE:** Only applications found within the Multi window panel can be active atop another current application on the screen.

### To display the Multi window tab:

1. Press and hold  (**Back key**).

The Multi window tab  appears on the left side of the screen.

2. Tap the tab to open the application panel showing all the available Multi window apps.

### To hide the Multi window tab:

- ▶ Press and hold  (**Back key**). This action hides the Multi window tab from view.


## Applications screen

To access the Applications screens, from any Home screen, tap the **Apps** icon .

Swipe left or right through the screens. As you download new applications, they will appear on the Applications screens in alphabetical order.

As you transition from screen to screen, a dot (located at the bottom) displays which panel you are currently on.





## Add an app to the Home screen

1. Swipe left or right to select a screen location for your new shortcut.
2. Tap  (**Apps**) to reveal all your current available applications. By default, applications are displayed as an alphabetical grid.
3. Scroll across the screens and locate your desired application.
4. Touch and hold the on-screen icon. The new shortcut then appears to hover over the current screen.
5. While still holding the on-screen icon, position it on the current screen. Once complete, release the screen to lock the shortcut into its new position.

## Move and delete items


Touch and hold the item you want to move or delete and drag it to another location or to the **Trash Can** icon at the top of the screen.

## Assigning a new Default Home screen

1. Press  (**Home**) →  (**Menu**) → **Edit page**.
2. Tap the  on the page you want as your Home screen.
3. The new Home screen will now include this  highlighted icon.




## Change Home screen wallpaper


1. Navigate to any screen.
  - OR –
- Press  (**Home**) to go to the Home screen.
2. Touch and hold an empty area of the screen.
3. From the Home screen window tap **Set wallpaper**.
4. From the Set wallpaper window tap **Home screen**, **Lock screen** or **Home and lock screens**.
5. Select a wallpaper type: **Gallery**, **Live wallpapers**, or **Wallpapers**.
6. Tap the desired image.
7. Tap **Set wallpaper** or **Done**.

## RINGTONE

### Set call and notification ringtone

1. From the Home screen, press  (Menu) → **Settings** → **My device** → **Sound**.
2. Tap either **Ringtones** or **Notifications**.
3. Tap the desired sound.
4. Tap **OK**.

### Set other sounds


1. From the Home screen, press  (Menu) → **Settings** → **My device** → **Sound**.
2. Scroll down to the **System** section and tap those items you want to turn on or off. Choose from: Dialing keypad tone, Touch sounds, Screen lock sound, or Haptic feedback.

## VOLUME

### Set call volume

While on a call, press the **Volume** key up or down.

### Set other volume

1. From the Home screen, press  (**Menu**) → **Settings** → **My device** → **Sound**.
2. Tap **Volume**.
3. Touch and drag the **Music, video, games and other media**, or **Ringtone, Notifications**, and **System** sliders to the desired levels.
4. Tap **OK**.

### Silence ringer



From the Home screen, press the **Volume** key down until you see the **Silent mode** icon .

To turn off silent mode, press the **Volume** key up.

## VOICEMAIL


### Use voicemail

**To call and set up voicemail:**



1. From the Home screen, tap  (**Phone**).
2. Touch and hold  until the device dials voicemail.
3. Follow the instructions to set up your voicemail account.

# CONTACTS

## Add new contact



1. From the Home screen, tap  (**Phone**).
2. Enter the contact's phone number.
3. Tap **Add to Contacts**.
4. Tap **Create contact**.
5. Tap a contact destination.
6. Enter the contact's information.
7. Tap **Save**.

## Call contact from the contacts list


1. From the Home screen, tap  (**Contacts**).
2. Scroll to and tap the contact you want to call.
3. Tap .


# EMAIL

## Set up Gmail

1. From the Home screen, tap  (**Apps**) →  (**Gmail**).
2. Tap **Existing** or **New**.
3. Follow the on-screen instructions.

## Set up Internet email

1. From the Home screen, tap  (**Apps**) →  (**Email**).

**NOTE:** If you have already set up an email account, tap the name of the open account, tap  (**Menu**) → **Settings** → **Add account..**

2. Tap the **Email** field and enter your email account information.
3. Tap the **Password** field and enter your password.
4. Tap **Next**.



5. At the Account options screen:


- Tap **Sync Email**
- Tap the **Notify me when email arrives** field to receive new email notifications.
- Tap the **Automatically download attachments when connected to Wi-Fi** field to assist with faster access to large email attachments when using Wi-Fi.
- Tap **Next**.

6. At the **Set up email** screen, name the account and enter a screen name to identify yourself on this account.

7. Tap **Done**.

## Set up Corporate Exchange email

1. From the Home screen, tap  (**Apps**) →  (**Email**).

**NOTE:** If you have already set up an email account, tap the name of the open account, tap  (**Menu**) → **Settings** → **Add account**.

2. Enter your email address and password information and tap **Next**.
3. Tap **Microsoft Exchange ActiveSync**.
4. Enter an updated **Domain**, confirm your **username** and **Password** information.
5. Re-enter your **Exchange server** information and tap **Next**.
6. Modify the account options as desired and tap **Next**.
7. Read the on-screen Activation disclaimer and, when prompted, tap **OK**.
8. If prompted, read the **Remote security administration** information and tap **OK** to accept the service and continue.
9. Adjust the various on-screen configuration fields and tap **Next**.



10. If prompted, read the **Activate device administrator?** screen and tap **Activate** to complete the email setup process.
11. Identify your new work email account with a unique name (Ex: Work), then tap **Done**.

Contact your company's IT department if you need more help.

## BLUETOOTH

Your phone comes with Bluetooth connectivity, a wireless technology that enables a connection between your phone and a Bluetooth headset or other Bluetooth device (sold separately).

### Prepare Bluetooth headset

Make sure that your headset is fully charged and in pairing mode. Refer to the headset's user manual for more information.

### Turn on Bluetooth and pair with headset

1. In a single motion, touch and drag the **Status** bar down to the bottom of the screen.
2. Tap **Bluetooth**. Your phone will scan for and display a list of available Bluetooth devices.




**NOTE:** Tap scan if the phone does not automatically begin to scan for available devices.

3. From the list, tap the headset/device you want to pair with your phone.
4. If necessary, enter the PIN or passcode.


## CAMERA & CAMCORDER

Use your phone's built-in Camera to take pictures and record video.





### Taking pictures

1. From the Home screen, tap  (**Apps**) →  (**Camera**) to launch the camera.
2. Aim the camera lens at the desired object and touch  to capture the image.



### Front facing camera and camcorder

- In camera mode, touch  to switch to the front facing camera for video chat, self portraits and to record video in camcorder mode.

## Recording a video

1. From the Home screen, tap  (**Apps**) →  (**Camera**).
2. Aim the camcorder lens at the desired object and touch  to record video. Touch  to stop and automatically save recording.

## Viewing a picture or video

1. From the Home screen, tap  (**Apps**) →  (**Gallery**) and touch an **Album** to display items.
2. Touch the item you would like to view or play.


## NEAR FIELD COMMUNICATION

Near Field Communication (NFC) is a short-range wireless communication technology that allows you to make simple transactions, exchange digital content (also known as NFC tags), share large multimedia files (via S Beam), and connect electronic devices with just a touch. Your phone contains the NFC technology that allows you to use services and features that require NFC capability.

**NOTE:** For more details on NFC-related features and sharing options, refer to the User Manual or online Virtual Guide.

### Turn on NFC


To share tags with other NFC-enabled devices, you must first turn on NFC.

1. From the Home screen, press  (**Menu**) → **Settings** → **Connections** → **NFC**.
2. Tap the **ON/OFF slider** to activate NFC.
3. Enabling NFC also enables Android™ Beam.

## Turn on S Beam

This feature allows you to beam large files directly to another compatible device that is in direct contact.


These files can be larger, such as videos, HD pictures, and other large files. You can beam images and videos from your gallery, music files from your music player, and more.

1. From the Home screen, press  (**Menu**) → **Settings** → **Connections** → **S Beam**.
2. Tap the **ON/OFF slider** to activate S Beam.
3. Complete the transfer process between the two NFC-enabled devices by placing them back to back.

This feature can come in very handy to quickly share pictures between users with compatible S Beam devices.

## Turn on Voice Control


Voice Control allows you to use voice commands to control phone functions like answering a call by saying 'Answer', taking a photo by saying 'Cheese' or snoozing your Alarm by saying 'Snooze' and much more.

1. From the Home screen, press  (**Menu**) → **Settings** → **My device** → **Voice control**.
2. Tap the **ON/OFF slider** to activate Voice control.

# BATTERY & MEMORY MANAGEMENT

## Optimize battery life



There are some things you can do to optimize your phone's battery life.

1. In a single motion, touch and drag the **Status** bar down to the bottom of the screen.
2. Tap the  top right corner to access the additional functions and tap **Power saving** to enable the power saving mode. When activated, several features are set into saving mode: CPU, Screen power, Background color, and Haptic feedback.







## Optimize memory and speed up performance

### Use Task Manager to free up memory space




1. Press and hold  (**Home**) to launch the Task Manager screen.
2. Tap  (**Task manager**).
3. Tap the **Active applications** tab and select **End all** to stop all running applications.
4. Tap the **RAM** tab and select **Clear memory** to clear all inactive and background processes.  
Additional tabs are:
  - **Downloaded** to view and delete downloaded applications.
  - **Storage** to start monitoring your storage use.

## Clearing your cache

Get more storage space by clearing out application caches and moving or uninstalling unused applications.

1. From the Home screen, tap  (**Apps**) →  (**Internet**).
2. Press  (**Menu**) → **Settings** → **Privacy**.
3. Tap **Delete personal data** and then select **Browsing history, Cache, Cookies and site data, Passwords, Auto-fill data, and Location access**.
4. Tap **Done**.
5. Press  (**Home**) to return to the Home screen.

## Automatically deleting old messages

1. From the Home screen, tap  (**Apps**) →  (**Messaging**).
2. Press  (**Menu**) → **Settings**.
3. Tap **Delete old messages** to automatically delete text messages when the limit is reached.
4. Tap both the **Text message limit** and **Multimedia message limit** fields, select the message limit value, and tap **OK**.

## NOTES

[illegible]